

PlayStation.

PS5

PS5

PS5

PS5

CFI-Y1018

EN

Health and Safety

Before using the product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. Parents or guardians of children should read this manual for safe use.

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. Observe all warnings, precautions and instructions.

WARNING

PHOTOSENSITIVITY/EPILEPSY/SEIZURES

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. These conditions may trigger previously undetected epileptic symptoms or seizures in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, has an epileptic condition or has had seizures of any kind, **consult your physician before playing**.

IMMEDIATELY DISCONTINUE USE and consult your physician before resuming gameplay if you or your child experience any of the following health problems or symptoms: dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, seizures, or any involuntary movement or convulsion. **RESUME GAMEPLAY ONLY ON APPROVAL OF YOUR PHYSICIAN.**

Use and handling of video games to reduce the likelihood of a seizure

- Use in a well-lit area and keep the screen a safe distance from your face.
- Avoid prolonged use of the product. Take a 15-minute break during each hour of play.
- Avoid playing when you are tired or need sleep.

RADIO WAVES

Radio waves may affect electronic equipment or medical devices (for example, pacemakers), which may cause malfunctions and possible injuries.

- Keep the product at least 30 cm away from a pacemaker or other medical devices when using the network features.
- Turn off the product immediately, if you have any reason to suspect that interference is occurring with your pacemaker.
- If you use a pacemaker or other medical device, consult your doctor or the manufacturer of your medical device before using the wireless networking feature (wireless LAN).
- Do not use the wireless networking feature in areas where wireless network use is prohibited, such as in hospitals. Abide by medical institution regulations when using the product on their premises.

MAGNETS AND MEDICAL DEVICES

This product has magnets which may interfere with pacemakers, defibrillators and programmable shunt valves or other medical devices. Do not place this product close to such medical devices or persons who use such medical devices. Consult your doctor before using this product if you use such medical devices.

VOLUME LEVEL

Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:

- Limit the amount of time you use the headset or headphones at high volume.
- Avoid raising the volume to block out noisy surroundings.
- Lower the volume if you can't hear people speaking near you.

LITHIUM-ION BATTERY

Do not handle damaged or leaking lithium-ion batteries. If the material comes into contact with the skin, eyes or clothes, immediately rinse the affected area with clean water and consult your doctor.

The battery used in this device may present a risk of fire or chemical burn if misfreated.

YOUNG CHILDREN INJURIES

Keep the product out of the reach of young children. Young children may swallow small parts, may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.

NEVER DISASSEMBLE OR MODIFY THE PRODUCT OR ACCESSORIES

There is a risk of fire, electric shock, or injury.

Moisture condensation

If the product is brought directly from a cold location to a warm one, moisture may condense inside the product, causing the product to malfunction. Should this occur, turn off the product and leave it until the moisture evaporates (this may take several hours). If the product still does not operate properly, please contact customer support.

SONY

PS5

PS5

PS5

Wireless networking feature

使用本產品的無線網路功能時，請注意以下事項。本產品若接觸到人體或物品，可能會導致意外人身傷害或損壞。

- 使用動態感知功能前，請確認您有充足的活動空間。
- 請確實握住本產品，以防從您手中滑落並導致損壞或人身傷害。
- 使用經由USB連接線與PlayStation®5主機相連的產品時，請確認連接線有充足的空間，不會接觸到人體或物品。

Charging notices

- Charge in an environment where the temperature range is between 10 °C and 30 °C. Charging may not be as effective when performed in other environments.
- The battery has a limited lifespan. Battery duration will gradually decrease with repeated use and age. Battery life also varies depending on the storage method, usage state, environment, and other factors.
- When the product is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain battery functionality.

Screen

- Do not press your finger on the screen with excessive force. Also, do not scrape or scratch the screen with anything hard, such as metal, or anything with a sharp tip (such as a pencil or your fingernails). Any of these actions may damage or break the screen.
- Do not place the product screen-side down, as this may cause damage to the screen and sticks.
- Prolonged contact with water or dust may damage the screen and shorten its life.
- Direct exposure to sunlight may damage the product's screen. Be careful when using the product outdoors or near a window. A small number of pixel display defects may be present and considered normal.
- When using the product in a cold environment, you may notice shadows on the graphics or the screen may appear darker than usual. This is not a malfunction, and the screen will return to normal when the temperature goes up.

Precautions

Player comfort

If you experience any of the following health problems, discontinue use of the product immediately. If symptoms persist, consult a doctor.

- Dizziness, nausea, fatigue or symptoms similar to motion sickness
- Discomfort or pain in a part of the body, such as eyes, ears, hands or arms

Wireless networking feature

使用本產品的無線網路功能時，請注意以下事項。本產品若接觸到人體或物品，可能會導致意外人身傷害或損壞。

- 使用動態感知功能前，請確認您有充足的活動空間。
- 請確實握住本產品，以防從您手中滑落並導致損壞或人身傷害。
- 使用經由USB連接線與PlayStation®5主機相連的產品時，請確認連接線有充足的空間，不會接觸到人體或物品。

Charging notices

- Charge in an environment where the temperature range is between 10 °C and 30 °C. Charging may not be as effective when performed in other environments.
- The battery has a limited lifespan. Battery duration will gradually decrease with repeated use and age. Battery life also varies depending on the storage method, usage state, environment, and other factors.
- When the product is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain battery functionality.

Screen

- Do not press your finger on the screen with excessive force. Also, do not scrape or scratch the screen with anything hard, such as metal, or anything with a sharp tip (such as a pencil or your fingernails). Any of these actions may damage or break the screen.
- Do not place the product screen-side down, as this may cause damage to the screen and sticks.
- Prolonged contact with water or dust may damage the screen and shorten its life.
- Direct exposure to sunlight may damage the product's screen. Be careful when using the product outdoors or near a window. A small number of pixel display defects may be present and considered normal.
- When using the product in a cold environment, you may notice shadows on the graphics or the screen may appear darker than usual. This is not a malfunction, and the screen will return to normal when the temperature goes up.

Precautions

Player comfort

If you experience any of the following health problems, discontinue use of the product immediately. If symptoms persist, consult a doctor.

- Dizziness, nausea, fatigue or symptoms similar to motion sickness
- Discomfort or pain in a part of the body, such as eyes, ears, hands or arms

Vibration function

- If the product is sitting on a flat surface, the vibration of the product during gameplay may cause it to fall, leading to injury or malfunction.
- Do not use the vibration or trigger effect function if you have any ailment or injury to body parts such as the bones, joints, or muscles of the hand or arm that may be affected by this vibration function. To enable or disable these features, from the home screen, select **Quick Menu** ➤ **Settings** ➤ **Controller**.

Static shock

When using a headset or headphones in particularly dry air conditions, you may sometimes experience a small and quick (static) shock on your ears. This is a result of static electricity accumulated in the body, and is not a malfunction of your headset or headphones.

Motion sensor

When using the motion sensor function of the product, be cautious of the following points. If the product hits a person or object, it may cause accidental injury or damage.

- Before using the motion sensor function, make sure you have enough space to move around.
- Firmly grip the product to prevent it from slipping out of your grasp and causing damage or injury.
- If using a product that is connected to the PlayStation®5 console with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object.

Rear

USB port

USB cable

PS5 console

USB port

USB cable

PS5 console

• To charge the product while in rest mode, you have to configure the settings. From the PS5 home screen, select **Settings** ➤ **System** ➤ **Power Saving** ➤ **Features Available in Rest Mode** ➤ **Supply Power to USB Ports**, and then select a setting **Always** or **3 Hours**.

• Use the USB cable provided with this product or with your PS5 console. When using other cables, be sure to use a USB cable that complies with USB standards. Not all USB cables will function properly.

• You can also charge the product by connecting the USB cable to a AC adapter that supports USB PD (power delivery). Please use an AC adapter with USB Type-C® that outputs at least 5 V/3 A. You might not be able to charge the product on some devices.

Set up and handling

- Always ensure the product, accessories, or its connectors are free of liquid, excess dust and small particles.
- Do not touch the connectors or insert anything into the product.
- Do not use the product, cables, or connectors if they are damaged or modified.
- Do not leave the product or accessories on the floor or in a place where it may cause someone to trip or stumble.
- Do not place the product or accessories on surfaces that are unstable, tilted, or subject to vibration.
- Do not place heavy items on the product, or cables, throw or drop the product, or otherwise expose it to strong physical impact.
- Do not look at the screen or attempt to use the product while walking, driving or riding a bicycle as doing so could result in an accident and/or injury.
- Do not touch the product during an electrical storm when it is charging.
- Do not touch any other devices connected to the product with wet hands. Doing so may cause an electrical shock.
- Do not expose the product, accessories or battery to high temperatures, high humidity, or direct sunlight during operation, transportation, and storage.
- Depending on the conditions of use, the product may reach temperatures of 40 °C or more. Do not touch the product for an extended period of time under these conditions. Extended contact under these conditions may cause low-temperature burns*.
- * Low-temperature burns are burns that occur when the skin is in contact with objects of relatively low temperatures (40 °C or more) for an extended period of time.
- Only use AC adapters that meet the specifications provided. Using AC adapters that do not meet these specifications may cause fire or electric shock.
- Do not swing the product around by the cable.
- The screen (touch screen) is made of glass. If the screen is cracked or damaged, do not touch it as it may cause injury.

Screen	8-inch Full HD LCD touchscreen
Input/output	USB port Headset jack
Sound	Built-in stereo speakers
Networking	IEEE 802.11 a/b/g/n/ac PlayStation Link™ (2.4 GHz)
Charge time	Approx. 2 hours 30 minutes*
Electrical rating	5 V ≒ 3 A
Battery type	Built-in lithium-ion battery
Battery voltage	3.87 V ≒
Battery capacity	4,370 mAh
Mass	Approx. 510 g
Operating temperature	5 °C to 35 °C

* This time is estimated based upon charging via the PS5 console's USB Type-C port (SuperSpeed USB 10Gbps).

System software

- The system software of the product are licensed to you under the terms of a separate end user license agreement. For details, visit <https://www.playstation.com/legal/product-ssla/>.
- Always update the system software of your PS5 console and the product to the latest version.

Use and handling

Use the product and accessories according to the instructions in this manual. No authorization for the analysis or modification of the product, or the analysis and use of its circuit configurations, is provided.

Use in other countries

Depending on the country or region, there are limitations on the use of certain types of radio signals. In some cases, use of the product's network features may lead to a fine or other penalty.

Moisture condensation

If the product is brought directly from a cold location to a warm one, moisture may condense inside the product, causing the product to malfunction. Should this occur, turn off the product and leave it until the moisture evaporates (this may take several hours). If the product still does not operate properly, please contact customer support.

Further information

User's guide

Find more detailed information about features and settings in the User's Guide.

playstation.com/rp-usersguide/


playstation.com/help/

Customer support website

Find online support information such as step-by-step troubleshooting and frequently asked questions, visit:

playstation.com/help/

Copyright and trademarks

“PS”, “PlayStation”, “PS5” and “PlayStation Link” are registered trademarks or trademarks of Sony Interactive Entertainment Inc. “SONY” and “ ” are registered trademarks or trademarks of Sony Group Corporation.

Fontworks

All of the Japanese fonts and some part of the Latin fonts in this machine use characters provided by Fontworks Inc. © 2024 Fontworks Inc., a Monotype company.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Fontworks

Fontworks Inc.

Fontworks Inc.

Fontworks Inc.

健康與安全

使用本產品前，請先詳細閱讀本使用說明書和相容硬體的所有說明書，並妥善保存，以備將來使用。小孩的家長或監護人應閱讀本說明書以確保安全使用。

警告

光敏感 / 痲痺 / 突發性疾病

有極少數人，當看到某些亮光或閃光時，可能會痲痺發作或暫時性眩暈的情形。如果這些人看到螢幕上的某些畫面或背景，或者在遊玩遊戲時，可能會引發痲痺或暫時性眩暈。某些從未有過痲痺的人，也可能在這些情況下被引發出來。如果您或您的家人有痲痺狀況或任何突發性疾病，在遊玩遊戲前請先諮詢醫生。

如果您或您的孩子有以下任何一種健康問題或症狀，請立即停止使用，並先諮詢醫生，才能繼續遊玩遊戲。頭暈、視覺障礙、眼睛或肌肉抽動、意識不清、精神恍惚、突發性疾病、不自主的動作或抽搐。必須經醫生許可才能繼續遊玩遊戲。

減少發病可能性的遊戲使用和操作注意事項

- 請在光線良好的地方使用，並確保螢幕與臉部保持安全距離。
- 避免長時間使用本產品。每天1小時請休息15分鐘。
- 避免在您疲勞或需要睡眠時遊玩。

無線電波

無線電波可能會影響電子設備或醫療裝置（例如心律調節器），且可能會導致這些設備或裝置故障或導致人身傷害。

- 使用網路機能時，請讓本產品與心律調節器或其他醫療裝置之間保持至少30公分的距離。
- 若您有任何理由懷疑心律調節器受到干擾，請立即關閉本產品的電源。
- 若您有使用心律調節器或其他醫療裝置，請在使用無線網路機能（無線LAN）前，先詢問您的醫生或您身上之醫療裝置的製造廠商。
- 請勿在禁止使用無線網路的場所（如醫院）使用無線網路機能。在醫療機構內使用本產品時，請遵守其規定。

磁力與醫療器材

本產品有磁力，可能會干擾心律調節器、心臟去脈器及可調式引流管或其他醫療器材。請勿將本產品放在此類醫療器材或者使用此類醫療器材的使用者附近。如果您使用任何此類醫療器材，請在使用本產品前諮詢您的醫生。

音量大小

若使用耳機組或耳機時音量調整過高，可能會導致永久失聰。請將音量調整至安全水平。持續聆聽一段時間後，即使是音量不斷增大的嘈吵聲音，聽起來亦可能會與一般無異，但實際上卻可能會損害聽覺。若您感到耳鳴、耳部有不適或出現口齒不清的情況，請立即停止聆聽，並及時檢查聽覺。音量越高，對聽覺造成的影響越快，為保護您的聽覺。

- 請限制以高音量使用耳機組或耳機的時間。
- 避免調高音量至阻隔周圍環境的噪音。
- 若無法聽清是身邊人的說話聲，請調低音量。

鋰離子電池

請勿用手觸摸已損壞或電解液外洩的鋰離子電池。若電解液物質接觸到皮膚、眼睛或衣物，請立即用清水沖洗該部位並諮詢醫生。本裝置內使用的電池若處理不當，可能產生火災或化學灼傷的風險。

關於孩童傷害

請將本產品放在孩童拿不到的地方保管。孩童可能會誤吞細小零件、用連接線纏繞自己，而造成身體損傷或導致意外發生。機器故障。

* This time is estimated based upon charging via the PS5 console's USB Type-C port (SuperSpeed USB 10Gbps).

System software

- The system software of the product are licensed to you under the terms of a separate end user license agreement. For details, visit <https://www.playstation.com/legal/product-ssla/>.
- Always update the system software of your PS5 console and the product to the latest version.

Use and handling

Use the product and accessories according to the instructions in this manual. No authorization for the analysis or modification of the product, or the analysis and use of its circuit configurations, is provided.

Use in other countries

Depending on the country or region, there are limitations on the use of certain types of radio signals. In some cases, use of the product's network features may lead to a fine or other penalty.

Moisture condensation

If the product is brought directly from a cold location to a warm one, moisture may condense inside the product, causing the product to malfunction. Should this occur, turn off the product and leave it until the moisture evaporates (this may take several hours). If the product still does not operate properly, please contact customer support.

動態感測器

使用本產品的動態感測功能時，請注意以下事項。本產品若接觸到人體或物品，可能會導致意外人身傷害或損壞。

- 使用動態感知功能前，請確保您有充足的活動空間。
- 請確實握住本產品，以防從您手中滑落並導致損壞或人身傷害。
- 使用經由USB連接線與PlayStation®5主機相連的產品時，請確認連接線有充足的空間，不會接觸到人體或物品。

光條

本產品的光條閃爍時，請勿注視光條。若感到不適或疼痛，請立即停止使用本產品。

設定與處理

- 請始終確保本產品、周邊機器或其端子部位未沾染任何液體、大量灰塵及細微顆粒。
- 請勿觸摸端子或將任何異物插入本產品中。
- 請勿使用已損壞或經改造的產品、連接線或端子。
- 請勿將本產品或周邊機器置於地板上或可能絆倒他人的地方。
- 請勿將本產品或連接線放在不平整、傾斜或易受震動的地方。
- 請勿在本產品或連接線上放置重物，亦勿投擲或掉落本產品，或者使其受到強烈的外力撞擊。
- 請勿在步行、開車或騎腳踏車時觀看螢幕或嘗試使用本產品，否則可能會導致交通意外發生及 / 或人身傷害。
- 請勿在雷雨天氣中，觸摸正在充電的產品。
- 請勿用濕手觸摸連接至本產品的任何其他裝置。那麼做可能會導致觸電。
- 操作、運輸及保管過程中，請勿將本產品、附屬品或電池放在高溫、濕氣極重或受日光直射的地方。
- 本產品的溫度可能會隨使用狀況而達到40 °C或更高溫度。請勿在此狀況下長時間觸摸本產品。在此狀況下長時間接觸可能會導致低溫灼傷*。
- * 當皮膚與相對低溫（40 °C或更高）的物體長時間接觸時，便會發生低溫灼傷。
- 請僅使用符合所規格的交流電轉換器。使用不符合此規格的交流電轉換器可能會導致火災或觸電。
- 請勿抓取連接線來啟動本產品。
- 螢幕（觸摸螢幕）採用玻璃製成。若螢幕破裂或損壞，請勿觸摸螢幕，否則可能會導致人身傷害。

Fontworks

All of the Japanese fonts and some part of the Latin fonts in this machine use characters provided by Fontworks Inc. © 2024 Fontworks Inc., a Monotype company.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Fontworks

Fontworks Inc.

Fontworks Inc.

Fontworks Inc.

健康與安全

使用本產品前，請先詳細閱讀本使用說明書和相容硬體的所有說明書，並妥善保存，以備將來使用。小孩的家長或監護人應閱讀本說明書以確保安全使用。

警告

光敏感 / 痲痺 / 突發性疾病

有極少數人，當看到某些亮光或閃光時，可能會痲痺發作或暫時性眩暈的情形。如果這些人看到螢幕上的某些畫面或背景，或者在遊玩遊戲時，可能會引發痲痺或暫時性眩暈。某些從未有過痲痺的人，也可能在這些情況下被引發出來。如果您或您的家人有痲痺狀況或任何突發性疾病，在遊玩遊戲前請先諮詢醫生。

如果您或您的孩子有以下任何一種健康問題或症狀，請立即停止使用，並先諮詢醫生，才能繼續遊玩遊戲。頭暈、視覺障礙、眼睛或肌肉抽動、意識不清、精神恍惚、突發性疾病、或者不自主地動作或抽搐。必須經醫生許可才能繼續遊玩遊戲。

減少發病可能性的遊戲使用和操作注意事項

- 請在光線良好的地方使用，並確保螢幕與臉部保持安全距離。
- 避免長時間使用本產品。每天1小時請休息15分鐘。
- 避免在您疲勞或需要睡眠時遊玩。

無線網路機能

使用掃描功能選擇無線LAN基地台（access point）時，可能會顯示非提供公眾使用的基地台。您僅能使用經授權能合法使用的基地台。

充電注意事項

- 建議您在溫度介於10 °C ~ 30 °C的環境下替電池充電。在其他溫度下充電可能會導致低溫充電的效率。
- 電池的壽命有限。電池總壽命會因重複使用的次數與時間而不斷減少。電池的壽命會因保管方法、使用情形、環境以及其他要素而出現差異。
- 長時間不使用產品時，建議您仍應每年至少完全充電一次，以維持電池性能。

螢幕

- 請勿用手指過度按壓螢幕。亦請勿使用任何堅硬（如金屬物品）或尖銳物品（如鉛筆或指甲）劃傷或刮傷螢幕。這些行為可能會損壞或破壞螢幕。
- 請勿將本產品的螢幕面朝下放置，否則可能會損壞螢幕和操作桿。
- 長時間接觸水或灰塵可能會損壞螢幕並縮短其使用壽命。
- 直射的日光可能會損壞本產品的螢幕。在戶外或窗戶附近使用本產品時請務必小心。
- 螢幕可能存在少量的素素顯示缺陷，乃是正常現象。
- 在寒冷的環境下使用本產品時，您可能會發現畫面上有陰影或螢幕似乎比平常更暗。此現象並非故障，螢幕會在溫度上升後恢復正常。

保養與清潔

請遵守以下注意事項，以防產品外觀變形或變色。

- 切勿碰觸螢幕或乙烯基材質長時間接觸本產品。
- 切勿使用稀釋劑、汽油或酒精。避免使用濕紙巾、經化學處理的擦布或含有此類物質的其他產品。

關於產品壽命結束時的回收

本產品由多種可回收的材料製成。丟棄本產品時，請遵循當地法規。

為本產品充電

在主機電源啟動的狀態或處於待機模式時，使用隨附的USB連接線連接本產品與PS5®主機。充電開始後，本產品的充電狀態會立即顯示在螢幕上。

背面

USB連接埠

USB連接線

PS5主機

- 若要在待機模式下為本產品充電，您必須進行設定。從PS5主畫面，選擇 **☰** [設定] > [系統] > [省電] > [待機模式中的機能] > [為USB連接埠充電]，然後選擇 **永久** 或 **[3小時]** 的設定。
- 請使用本產品或PS5主機隨附的USB連接線。使用其他連接線時，請務必使用符合USB標準的USB連接線。並非所有USB連接線都能正常運作。
- 您可透過將USB連接線連接至支援USB PD（快充）的交流電轉換器為本產品充電。請使用輸出至少5 V/3 A的USB Type-C®交流電轉換器。您可能無法在某些裝置上為本產品充電。

靜電衝擊

當在空氣特別乾燥的狀況下使用耳機組或耳機時，耳朵可能會感到輕微且短暫的刺痛。此情形並非耳機組或耳機發生故障，而是人體釋放體內累積的靜電所造成。

規格

本公司保留在沒有事先通知的情況下，變更設計或規格之權利。操作說明可能因PS5主機和本產品所使用的系統軟體版本而不同。

螢幕	8吋Full HD LCD觸控螢幕
輸入 / 輸出	USB連接埠 耳機組連接埠
聲音	內建立體聲喇叭
網路	IEEE 802.11 a/b/g/n/ac PlayStation Link™ (2.4 GHz)
充電時間	約2小時30分鐘*
額定電壓 / 額定輸入電流	5 V ≒ 3 A
電池類型	內置型鋰離子電池
電壓	3.87 V ≒
電池容量	4,370 mAh
重量	約510 g
操作溫度	5 °C ~ 35 °C

* 此時間為透過PS5主機的USB Type-C連接埠（SuperSpeed USB 10Gbps）進行充電的估計時間。

* 此時間為透過PS5主機的USB Type-C連接埠（SuperSpeed USB 10Gbps）進行充電的估計時間。

關於系統軟體

- 本產品的系統軟體乃受個別用戶許可協議的條款約束。詳情請造訪 <https://www.playstation.com/legal/product-ssla/>。
- 請隨時將PS5主機及本產品的系統軟體更新至最新版本。

規格

本公司保留在沒有事先通知的情況下，變更設計或規格之權利。操作說明可能因PS5主機和本產品所使用的系統軟體版本而不同。

螢幕	8吋Full HD LCD觸控螢幕
輸入 / 輸出	USB連接埠 耳機組連接埠
聲音	內建立體聲喇叭
網路	IEEE 802.11 a/b/g/n/ac PlayStation Link™ (2.4 GHz)
充電時間	約2小時30分鐘*
額定電壓 / 額定輸入電流	5 V ≒ 3 A
電池類型	內置型鋰離子電池
電壓	3.87 V ≒
電池容量	4,370 mAh
重量	約510 g
操作溫度	5 °C ~ 35 °C

* 此時間為透過PS5主機的USB Type-C連接埠（SuperSpeed USB 10Gbps）進行充電的估計時間。

硬體保固（適用於台灣） / 保用（適用於香港）

有關各地區的保固/保用條款及細則，請瀏覽官方網站 playstation.com/help/ 的「支援」頁面。

合規性資訊

依據低功率射頻器材技術規範

- 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
- 應避免影響附近雷達系統之操作。
- 高增益指向性天線只應應用於固定式點對點系統。

使用過度恐傷害視力。

使用30分鐘請休息10分鐘。

未滿2歲幼兒不看螢幕，2歲以上每天看螢幕不要超過1小時。

商品名稱：遙控遊玩機

製造年份：請見產品本體標示

製造號碼：請見產品本體標示

廢電池回收

（僅適用於台灣）

更多資訊

可在用戶指南中找到關於機能與設定的更多詳細資訊。

用戶指南

可在用戶指南中找到關於機能與設定的更多詳細資訊。

playstation.com/rp-usersguide/

playstation.com/help/

客戶服務中心網站


請瀏覽下方網站，尋找例如逐步故障排除與常見問題等線上支援資訊。

playstation.com/help/

請瀏覽下方網站，尋找例如逐步故障排除與常見問題等線上支援資訊。

版權與商標

“PS”，“PlayStation”，“PS5”和“PlayStation Link”為Sony Interactive Entertainment Inc.之註冊商標或商標。

“SONY”和“ ”為Sony Group Corporation之註冊商標或商標。

Fontworks

All of the Japanese fonts and some part of the Latin fonts in this machine use characters provided by Fontworks Inc. © 2024 Fontworks Inc., a Monotype company.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Fontworks

Fontworks Inc.

Fontworks Inc.

Fontworks Inc.

健康和安全

使用本產品前，請先仔細閱讀本說明書以及硬件所对应的说明书，并妥善保管，以便将来使用。为安全使用本产品，儿童的家长或监护人应仔细阅读本说明书。

版权及商标

“**PS**”、“PlayStation”、“P5S”和“PlayStation Link”为Sony Interactive Entertainment Inc.의注册商标或商标。
“SONY”和“**PS**”为Sony Group Corporation의注册商标或商标。

Fontworks

All of the Japanese fonts and some part of the Latin fonts in this machine use characters provided by Fontworks Inc.
© 2024 Fontworks Inc., a Monotype company.
USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

KR

건강 및 안전

제품을 사용하기 전에 이 설명서와 호환 하드웨어에 대한 설명서를 주의 깊게 읽어 주십시오. 나중에 사용할 수 있도록 설명서를 보관해 주십시오. 어린이의 부모 또는 보호자는 안전한 사용을 위해 이 설명서를 반드시 읽어 주시기 바랍니다.

이 제품은 안전을 최우선으로 고려하여 설계되었습니다. 그러나 전기 장치를 부적절하게 사용하면 화재, 감전 또는 부상을 입을 가능성이 있습니다. 모든 경고, 사용 권 주의사항 및 지침을 준수해 주십시오.

경고

광상성/간질/발작

간헐적인 화염이나 그 외 빛의 자극에 의해, 아주 드물게 눈이 아프거나 시력 이상, 간질성 발작을 경험하는 분이 있을 수 있습니다. 이러한 사람은 스크린의 특정 패턴이나 배경에 노출되거나 비디오 게임을 플레이할 때 간질 발작을 일으키거나 의식을 잃을 수 있습니다. 이런 조건에서는 발작이나 간질 이력이 없던 분도 이전에 발견되지 않았던 간질 증상이나 발작을 유발할 수 있습니다. 만약 본인이나 가족 중에 간질 증상을 가진 분이냐 어떤 종류든 발작 증세가 있는 분이 있다면 **플레이하기 전에 반드시 의사와 상담해 주십시오.**

본인이나 자녀가 아래의 건강 문제나 증상을 경험하는 경우에는 **즉시 사용을 중지하고** 의사의 진찰을 받아주십시오:
- 현기증, 흐리고 애매된 시각, 눈이나 근육 경련, 의식상실, 방향감각 상실, 발작 또는 모든 종류의 불수의 운동이나 경련.
의사의 승인이 있을 때만 게임 플레이를 재개해 주십시오.

발작 위험을 줄이기 위한 비디오 게임의 이용법

- 조명이 밝은 곳에서 사용하고 얼굴과 스크린 사이에 안전 거리를 유지해 주십시오.
- 제품의 장시간 사용을 피해 주십시오. 사용할 때는 건강을 위해 1시간마다 15분씩 휴식을 취해 주십시오.
- 피곤할 때나 수면이 부족할 때는 사용을 삼가 주십시오.

전파에 대하여

- 전파가 전자기기나 의료 기기(심장 박동기 등)에 영향을 미쳐 오작동에 의한 사고나 부상의 원인이 될 수 있습니다.
- 네트워크 기능을 사용할 때는 제품을 심장박동기나 기타 의료 기기에서 30cm 이상 떨어진 곳에 두십시오.
- 심박조율기에 대해 간섭 발생이 의심될 경우 즉시 제품을 꺼 주십시오.
- 심장 박동기나 기타 의료 기기를 사용하시는 경우 무선 통신기능 (무선 LAN)을 사용하기 전에 의사나 해당 의료기기 제조자와 상담해 주십시오.
- 별명 및 무선 네트워크 사용이 금지된 장소에서는 무선 네트워크 기능을 사용하지 마십시오. 의료기관 구내에서 제품을 사용할 때는 의료기관 규정을 준수해 주십시오.

자석 및 의료 장치

이 제품은 심장박동기, 제세동기 및 프로그램 가능 분기 펌프 또는 기타 의료 기기의 작동을 방해할 수 있는 자석을 포함하고 있습니다. 해당 의료 기기 또는 해당 의료 기기를 사용하는 사람들 가까이에 이 제품을 두지 마십시오. 해당 의료 기기를 사용하는 경우, 이 제품을 사용하기 전에 의사와 상담해 주십시오.

음량

- 헤드셋이나 헤드폰을 높은 볼륨으로 사용하면 영구적인 청력 손실이 발생할 수 있습니다. 볼륨을 안전한 수준으로 설정해 주십시오. 시간이 지남에 따라 점점 더 커지는 오디오는 정상적으로 들리기 시작할 수 있지만 실제로는 청력을 손상시킬 수 있습니다. 소리가 들리거나 기타 불쾌하거나 알지 못하게 되지 않으면 듣기 볼륨지하고 청력 감사를 받아 주십시오. 볼륨이 클수록 청력이 더 빨리 영향을 받을 수 있습니다. 청력을 보호하려면 다음의 내용에 따라 주십시오.
 - 헤드셋이나 헤드폰을 높은 볼륨으로 사용하는 시간을 제한해 주십시오.
 - 주변 환경의 심한 소음을 차단하기 위해 볼륨을 낮추지 마십시오.
 - 주변 사람들이 말하는 소리가 들리지 않으면 볼륨을 낮춰 주십시오.

리튬 이온 배터리

손상되거나 누출된 리튬 이온 배터리를 만지지 마십시오. 이 물질이 피부, 눈 또는 의류에 닿은 경우 즉시 깨끗한 물로 해당 부위를 헹구고 의사와 상담해 주십시오.
이 기기에 사용된 배터리는 잘못 취급할 경우 화재 또는 화학적 화상의 위험이 있습니다.

어린이 부상

제품을 어린 아이들의 손이 닿지 않는 곳에 보관해 주십시오. 어린 아이들이 작은 부품을 삼키거나 케이블을 스스로 잡아 부상을 입거나 사고 또는 오작동의 원인이 될 수 있습니다.

제품이나 액세서리의 분해 또는 개조 금지

화재, 감전 또는 부상의 위험이 있습니다.

사용 전 주의

플레이어 안전

- 다음과 같은 건강 문제가 발생하면 즉시 제품 사용을 중단해 주십시오. 증상이 계속되면 의사와 상담해 주십시오.
- 한기증, 메스꺼움, 피로 또는 열미와 유사한 증상
- 눈, 귀, 손 또는 팔과 같은 신체 일부의 불편함이나 통증

진동 기능

- 제품이 평평한 표면에 놓여 있는 경우 게임 플레이 중 제품의 진동으로 인해 제품이 떨어져 부상이나 오작동을 일으킬 수 있습니다.
- 손이나 팔의 뼈, 관절 또는 근육 등의 신체 부위에 질병 또는 부상이 있거나 진동 기능에 의해 영향을 받을 수 있는 경우 진동 또는 트리거 효과 기능을 사용하지 마십시오. 이러한 기능을 활성화 또는 비활성화하려면 홈 화면에서 **PS**[버튼 메뉴] > **PS**[설정] > [컨트롤러]를 선택해 주십시오.

정전기 충격

특히 공기가 건조한 상황에서 헤드셋이나 헤드폰을 사용할 때 귀에 작고 빠른 (정전기) 충격이 발생하는 경우가 있습니다. 이는 신체에 축적된 정전기에 의한 것이며 헤드셋이나 헤드폰의 오작동이 아닙니다.

모션 센서

- 제품의 모션 센서 기능을 사용할 때는 다음 사항에 주의해 주십시오. 제품이 사람이냐 물체에 부딪히면 예기치 않은 부상이나 손상이 발생할 수 있습니다.
- 모션 센서 기능을 사용하기 전에 움직일 공간이 충분한지 확인합니다.
- 제품이 손에서 미끄러져 손상이나 부상을 입지 않도록 단단히 잡아 주십시오.
- USB 케이블로 PlayStation®5에 연결된 제품을 사용하는 경우 케이블이 사람이냐 물체에 부딪히지 않도록 케이블을 위한 공간이 충분한지 확인해 주십시오.

라이트 바

제품의 광박이는 라이트 바를 움직이지 마십시오. 불편함이나 통증이 느껴지면 즉시 제품 사용을 중지해 주십시오.

설치 및 취급

- 제품, 액세서리 또는 커넥터에 항상 액체, 과도한 먼지 및 작은 이물질이 없는지 확인해 주십시오.
- 커넥터를 건드리거나 제품 속에 아무 것도 넣지 마십시오.
- 제품, 케이블 또는 커넥터가 손상 또는 변형된 경우 사용하지 마십시오.
- 제품 또는 액세서리를 바닥이나 다른 사람이 걸려 넘어질 수 있는 곳에 두지 마십시오.
- 제품 또는 액세서리를 불안정하거나 기울어져 있거나 진동이 있는 표면 위에 놓지 마십시오.
- 제품이나 케이블 위에 무거운 물건을 놓거나 제품을 던지거나 떨어뜨리거나 강한 물리적 충격을 가하지 마십시오.
- 겉거나 윤전 또는 자전차를 타는 동안에는 사고 및/또는 부상을 입을 수 있으므로 스크린을 보거나 제품을 사용하지 마십시오.
- 충전 중에 뇌우가 칠 경우 제품을 건드리지 마십시오.
- 젖은 손으로 제품에 연결된 다른 기기를 건드리지 마십시오. 감전의 위험이 있습니다.
- 작동, 운송 및 보관 중에는 제품, 액세서리 또는 배터리를 고온, 다습 또는 직사광선에 노출시키지 마십시오.
- 사용 조건에 따라 제품의 온도가 40°C 이상에 달할 수 있습니다. 이러한 조건에서는 제품을 잠시만 건드리지 마십시오. 이러한 조건에서 장시간 접촉하면 저온 화상"을 입을 수 있습니다.
- 저온 화상은 피부가 비교적 낮은 온도(40°C 이상)의 물체에 장시간 접촉할 때 발생하는 화상을 말합니다.
- 제공된 사람이 맞는 AC 어댑터만 사용해 주십시오. 이러한 사양에 맞지 않는 AC 어댑터를 사용하면 화재나 감전의 원인이 될 수 있습니다.
- 케이블을 잡고 제품을 휘두르지 마십시오.
- 스크린(터치스크린)은 유리 소재입니다. 스크린에 금이 가거나 손상된 경우 부상을 입을 수 있으므로 건드리지 마십시오.
- a) 제품에 동봉된 케이블, b) PlayStation® 공식 액세서리 또는 c) 길이 3 m 이하인 케이블 중 한 가지 조건을 충족하는 케이블만 사용해 주십시오.

본 설명서의 지침에 따라 제품 및 액세서리를 사용해 주십시오. 제품의 분석 또는 변경, 또는 회로 구성의 분석 및 사용에 대한 권한은 부여되지 않습니다.

다른 나라에서의 사용

국가 또는 지역에 따라 특정 유형의 무선 신호 사용에 제한이 있을 수 있습니다. 경우에 따라 제품의 네트워크 기능을 사용하면 불금이 부과되거나 기타 처벌을 받을 수 있습니다.

이슬맺힘(결로현상)이 일어났을 때에는

제품을 주운 곳에서 따뜻한 곳으로 바로 옮기면 제품 내부에 찬 습기로 인해 제품이 오작동할 수 있습니다. 이 경우 제품을 끄고 습기가 사라질 때까지 그대로 두십시오(열 시간이 걸릴 수 있습니다). 그래도 제품이 제대로 작동하지 않으면 고객센터으로 문의해 주십시오.

무선통신기능에 대하여

스캔 기능을 사용하여 무선 LAN 액세스 포인트를 선택할 때 공용이 아닌 액세스 포인트가 표시될 수 있습니다. 집이나 공공 장소의 무선랜 서비스 등 이용 권한이 있는 액세스 포인트에만 접속해 주십시오.

충전에 관한 참고 사항

- 주위 온도가 10°C ~ 30°C인 환경에서 충전해 주십시오. 그 외의 환경에서는 충전 효율이 떨어질 수 있습니다.
- 배터리는 수명이 제한되어 있습니다. 반복된 사용 및 사용한 기간에 따라 배터리의 사용 시간은 점점 줄어듭니다. 배터리 수명은 보관 방법, 사용 상태, 환경 및 다른 요소에 의해 달라질 수 있습니다.
- 장기간 사용하지 않는 경우에도, 기능을 유지하기 위해 1년에 한 번은 완전히 충전해 주십시오.

스크린

- 손가락에 과한 힘을 주어 스크린을 누르지 마십시오. 또한 금속과 같이 딱딱한 물건이나 연필이나 손톱 등 끝이 뾰족한 물건으로 스크린을 긁지 마십시오. 이러한 동작으로 인해 스크린이 손상되거나 파손될 수 있습니다.
- 스크린과 스틱이 손상될 수 있으므로 제품을 스크린이 아래로 향하게 놓지 마십시오.
- 물 또는 먼지와 장시간 접촉하면 스크린이 손상되고 수명이 단축될 수 있습니다.
- 햇빛에 직접 노출되면 제품의 스크린이 손상될 수 있습니다. 실외나 창문 근처에서 제품을 사용할 때는 주의해 주십시오.
- 스크린의 픽셀 디스플레이에 결함이 존재할 수 있으나 이는 정상으로 간주됩니다.
- 추운 환경에서 제품을 사용할 경우 그래픽에 그림자가 생기거나 스크린이 평소보다 어둡게 보일 수 있습니다. 이는 오작동이 아니며 온도가 올라가면 스크린이 정상으로 돌아옵니다.

관리 및 손질

- 제품 외관이 변질 또는 변색되지 않도록 아래 주의 사항을 준수해 주십시오.
- 고무 또는 비닐 물질이 제품에 장시간 닿지 않도록 해 주십시오.
- 시너, 벤진 또는 알코올을 사용하지 마십시오. 물수건, 화학 처리된 천 및 이러한 물질이 포함된 기타 제품을 사용하지 마십시오.


수명이 다한 제품의 재활용

제품은 재활용이 가능한 여러 재료로 만들어졌습니다. 제품을 폐기할 때는 각 지자체의 폐기 관련 규정에 따라 주십시오.

제품 충전

콘솔이 켜져 있거나 대기 모드에 있을 때 동봉된 USB 케이블을 사용하여 PS5®에 연결합니다.

충전이 시작되면 잠시 동안 스크린에 제품의 충전 상태가 표시됩니다.

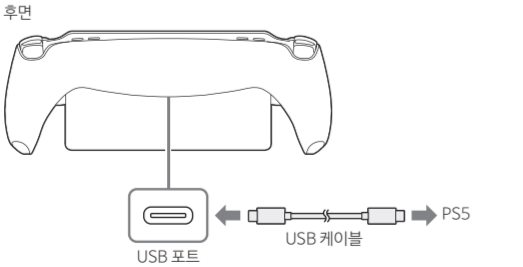

- 대기 모드에서 제품을 충전하려면 설정을 구성해야 합니다. PS5 홈 화면에 있는 **PS**[설정] > [시스템] > [설정] > [대전 모드에서 사용할 수 있는 기능] > [USB 포트에 전원 공급하기]를 선택한 후 [항상] 또는 [3시간]을 선택합니다.
- 본 제품 또는 PS5와 함께 제공된 USB 케이블을 사용해 주십시오. 다른 케이블을 사용할 때는 반드시 USB 표준을 준수하는 USB 케이블을 사용해 주십시오. 모든 USB 케이블이 제대로 작동하는 것은 아닙니다.
- USB PD(전원 공급)를 지원하는 AC 어댑터에 USB 케이블을 연결하여 제품을 충전할 수도 있습니다. 5V/3A 이상 출력의 USB Type-C® AC 어댑터를 사용해 주십시오. 일부 기기에서는 제품이 충전되지 않을 수 있습니다.

주요 사양

디자인 및 사양은 예고 없이 변경될 수 있습니다.

사용설명서는 PS5 및 제품에 사용 중인 시스템 소프트웨어 버전에 따라 다를 수 있습니다.

스크린	8인치 풀 HD LCD 터치스크린
입출력	USB 포트 헤드셋 잭
사운드	내장 스테레오 스피커
통신	IEEE 802.11 a/b/g/n/ac PlayStation Link™ (2.4GHz)
충전 시간	약 2시간 30분¹
정격	5V ≍ 3A
배터리 유형	내장형 리튬-이온 배터리
전압	3.87V ≍
배터리 용량	4,370mAh
무게	약 510g
허용 온도	5°C ~ 35°C
주파수	PlayStation Link: 2400~2483.5MHz 대역 Wi-Fi: 2400~2483.5MHz 대역² 5150~5350MHz, 5470~5850MHz 대역

¹1 이 시간은 PS5의 USB Type-C 포트(SuperSpeed USB 10Gbps)를 통한 충전을 기준으로 한 예상 시간입니다.
²2 이 제품은 1ch에서 11ch까지의 사용 가능합니다.

시스템 소프트웨어에 대하여

- 제품의 시스템 소프트웨어는 별도의 최종 사용자 라이선스 계약 조건에 따라 귀하에게 라이선스가 부여됩니다. 자세한 내용은 https://www.playstation.com/legal/product-ssla/를 참조해 주십시오.
- PS5와 제품의 시스템 소프트웨어를 항상 최신 버전으로 업데이트해 주십시오.

보증 규정

고객님께
- 보증을 받으시려면 필요사항(구입일, 판매점 정보, 제품명)이 기재된 구매 증빙 서류(현금 및 카드 영수증, 세금계산서)를 반드시 보관해 주십시오.

보증 규정

- 보증 기간은 구매일로부터 1년입니다. 단, 구매 증빙 서류가 없을 경우 Sony Interactive Entertainment Korea Inc.가 별도로 정하는 기준에 따릅니다.
- 소비자 기본법에 의한 소비자 분쟁해결 기준에 준합니다.
- 보증 기간 중 정상적인 사용 상태(사용설명서 등의 주의 사항에 따라 바르게 사용한 상태)에서 고장이 발생한 경우에는 Sony Interactive Entertainment Korea Inc.에서 무상으로 수리를 교환해 드립니다. 교환 시 새 제품과 성능과 안정성이 동일한 리퍼바시 제품으로 교환될 수 있습니다.
- 보증 기간 종료라도 다음과 같은 경우는 비용이 청구됩니다.
 - 구매 증빙 서류가 없는 경우
 - 구매 증빙 서류에 구입 연월일, 판매점 정보 등이 없는 경우
 - 구매 증빙 서류가 당사 제품의 것이 아니거나 확인이 불가능한 경우
 - 사용상의 부주의, 당사 제품 및 당사가 인정한 제품 이외의 제품 또는 부품, 응용 프로그램을 사용하여 발생한 손상이나 기타 기로부터 받은 손상
 - 구입 후 이동, 수송, 낙하 또는 액체나 이물질 등이 들어가서 발생한 고장 및 손상
 - 화재, 지진, 풍수해, 벼락 등 기타 천재지변이나 공해, 염분에 의한 손상, 이상 전압 등으로 인한 고장 및 손상
 - 일반 가정이 아닌 곳(예를 들어 업무용/상업용/전시용)에서의 사용으로 인한 고장 및 손상
 - 구매 증빙 서류가 임의로 수정된 경우
 - 재료 및 제조상의 결함에 기인하지 않는, 제품에 금이거나 파인 자국 또는 외관 손상의 경우
 - 정상적으로 사용하여 마모 또는 노후화된 부품을 교환하거나 손상을 수리하는 경우
 - 1~10)에 해당한다고 당사가 판단한 경우
- 소모성 부품은 보증에서 제외됩니다.
- 본 제품의 보증은 한국에서만 유효합니다. This warranty is valid only in the Republic of Korea.
- 고객지원: playstation.com/help

규정 준수 정보

내장 배터리 사용 시의 주의 사항

이 제품은 충전식 리튬-이온 배터리를 사용하고 있습니다. 배터리를 부적절하게 다루게 되면 화재나 화상의 위험이 있으나 분해하거나, 부수거나 소각하지 마십시오. 손질할 때나 충전 시에는 제조사의 사용설명서에 나와 있는 지시를 따라 주십시오. 사용하지 않을 때에는 배터리를 오랫동안 충전 상태로 방치하지 마십시오. 배터리를 폐기할 때는 사용설명서의 지시에 따라 주십시오.

자세한 정보

사용자 가이드
가능 및 설정에 대한 자세한 내용은 사용자 가이드에서 확인해 주십시오.

PS5

playstation.com/rp-usersguide/

고객지원 웹사이트

단계별 문제 해결, 자주 하는 질문 등의 온라인 지원 정보는 다음 웹사이트를 참조해 주십시오.

PS5

playstation.com/help/

저작권/상표

“**PS**”, “PlayStation”, “P5S” 및 “PlayStation Link”는 Sony Interactive Entertainment Inc.의 등록상표 또는 상표입니다.
“SONY” 및 “**PS**”는 Sony Group Corporation의 등록상표 또는 상표입니다.

Fontworks

All of the Japanese fonts and some part of the Latin fonts in this machine use characters provided by Fontworks Inc.
© 2024 Fontworks Inc., a Monotype company.
USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.